



RESTART TV INSTRUCTIONS

Restart TV allows you to go back in time, up to 3 hours, and play your favorite shows or events from the beginning without having set a DVR recording. It's like being able to go back in time and we know you're going to love it.

Step 1: Turn on your TV and Skitter set top box.

Step 2: Press the "Guide" button on your remote.

Step 3: Navigate to the channel on which your program aired.

Step 4: Using the left/back arrow on your remote you can move back in time on the guide.

Step 5: Once you've rewound the guide to the show and channel you'd like to view, and that program is highlighted in the guide, press the "i" information button or the OK button on your remote.

Step 6: On the right side of the information window, you'll see an option to "Play". Using the arrows on your remote, navigate to "Play" and once highlighted click "Ok" on your remote.

The show that you want to watch will now play from the beginning and you also have the ability to pause, rewind, fast forward (skip all the commercials), all using your KCTC remote. The option to "restart tv" is available for up to 3 hours after the program has originally aired so you no longer have to worry about remembering to set your DVR.

To end viewing the program, you can simply navigate to the channel you'd like to watch and once you've selected the new program Skitter will ask if you really want to exit the program you're watching, simply confirm with "OK" to exit.