



REMOTE STORAGE DVR INSTRUCTIONS

To order a single recording while watching live tv

Push the info button • Select order recording

To order a single recording from the guide

Highlight a program • Push the info button • Select order recording

To order a series recording while watching live tv

Push the info button • Select order series rec • Adjust settings*

Select order series rec to confirm

To order a series recording from the guide

Highlight a program • Push the info button • Select order series rec •

Adjust settings* • Select order series rec to confirm

**Series rec settings: Duration = how many days to keep an individual recording*

Keep at least = how many total recordings to keep for a particular program Recorded episodes = record all episodes including re-runs or only new episodes

To change a series recording

Push the menu button • Select remote storage dvr • Select series orders • Highlight a series recording schedule • Push the info button • Select cancel order series rec to remove the schedule Or Select settings to modify a series recording schedule Adjust settings* • Select modify to confirm

To play a recording

Push the menu button • Select remote storage dvr • Select recorded, all • Highlight a recording in the list** • Push the ok button to begin playback •

Push the stop button to end playback

***Ordered recordings will only be available from the remote storage dvr after to program has finished airing*

To delete a single recording

Push the menu button • Select Remote Storage DVR • Select Recorded, all • Highlight a recording in the list • Push the red button or the info button • Select Delete Recording • Select Yes to confirm

To delete multiple recordings

Push the menu button • Select Remote Storage DVR • Select recorded, all • Push the green (manage) button • Highlight a recording in the list • Push the OK button to place a checkmark on the recording or multiple recordings • Select the on-screen option to delete recordings with a checkmark • Select OK to confirm



RESTART TV INSTRUCTIONS

Restart TV allows you to go back in time, up to 3 hours, and play your favorite shows or events from the beginning without having set a DVR recording. It's like being able to go back in time and we know you're going to love it.

Step 1: Turn on your TV and Skitter set top box.

Step 2: Press the “Guide” button on your remote.

Step 3: Navigate to the channel on which your program aired.

Step 4: Using the left/back arrow on your remote you can move back in time on the guide.

Step 5: Once you've rewound the guide to the show and channel you'd like to view, and that program is highlighted in the guide, press the “i” information button or the OK button on your remote.

Step 6: On the right side of the information window, you'll see an option to “Play”. Using the arrows on your remote, navigate to “Play” and once highlighted click “Ok” on your remote.

The show that you want to watch will now play from the beginning and you also have the ability to pause, rewind, fast forward (skip all the commercials), all using your KCTC remote. The option to “restart tv” is available for up to 3 hours after the program has originally aired so you no longer have to worry about remembering to set your DVR.

To end viewing the program, you can simply navigate to the channel you'd like to watch and once you've selected the new program Skitter will ask if you really want to exit the program you're watching, simply confirm with “OK” to exit.